 
 
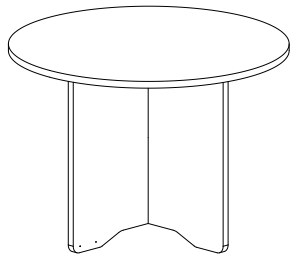 
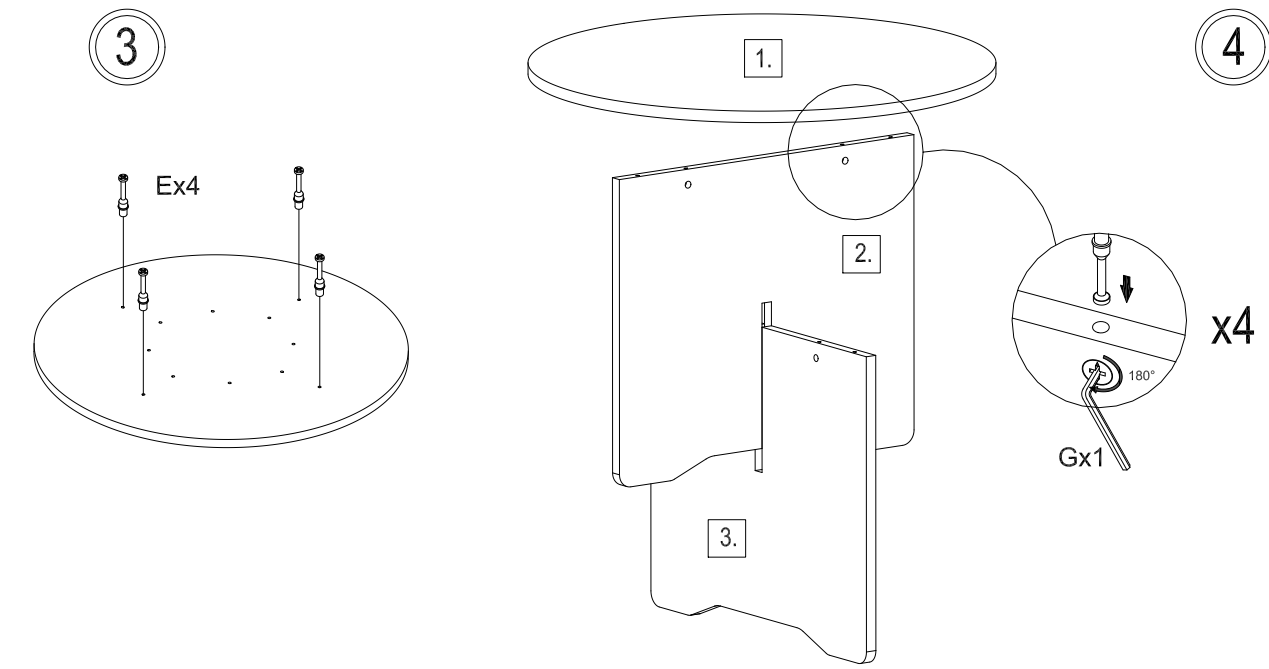 


MEETING

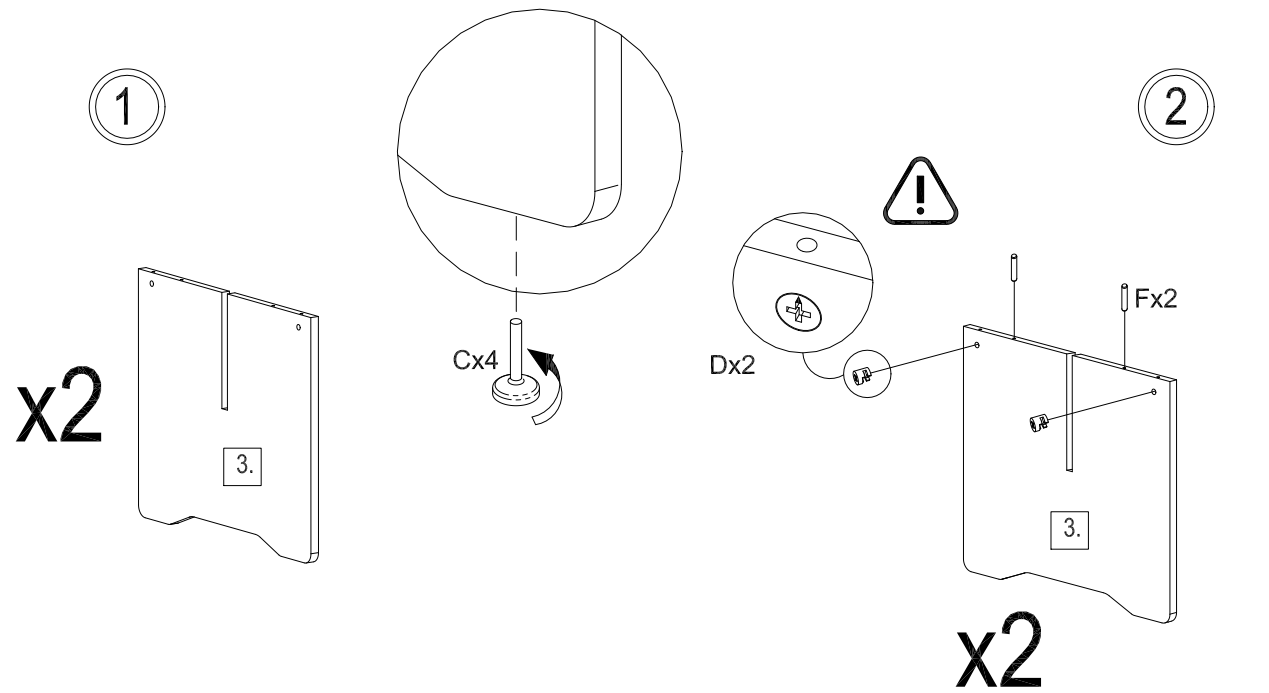 


HOJA INSTRUCCIONES SERIE 3005AA_3005AB_3006AA_3006AB
INSTRUCTIONS LEAFLET SERIAL 3005AA_3005AB_3006AA_3006AB
BEDIENUNGSANLEITUNG 3005AA_3005AB_3006AA_3006AB

PIEZAS y HERRAMIENTAS
PARTS AND TOOLS
TEILE UND WERKZEUGE

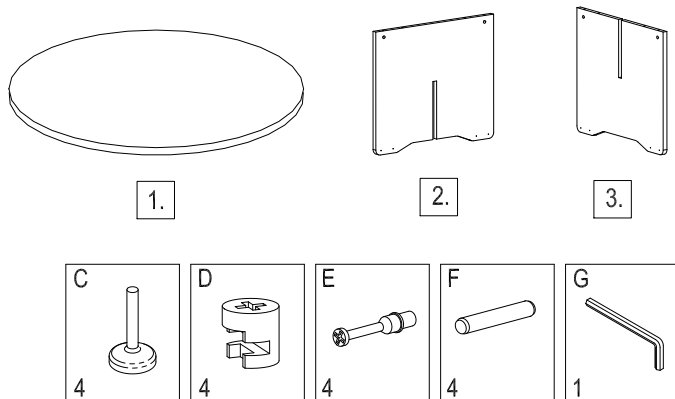 


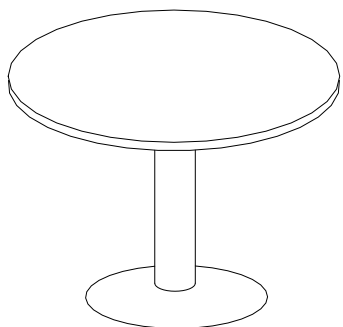


 
MEETING




HOJA INSTRUCCIONES SERIE 3005AT_3006AT
INSTRUCTIONS LEAFLET SERIAL 3005AT_3006AT
BEDIENUNGSANLEITUNG 3005AT_3006AT

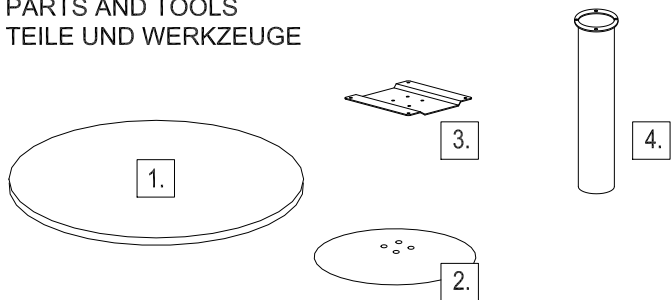PIEZAS y HERRAMIENTAS
PARTS AND TOOLS
TEILE UND WERKZEUGE




22-10-2013	B	C	D	E
				
4	M8	8	M6x16	1
				4
				M8x12

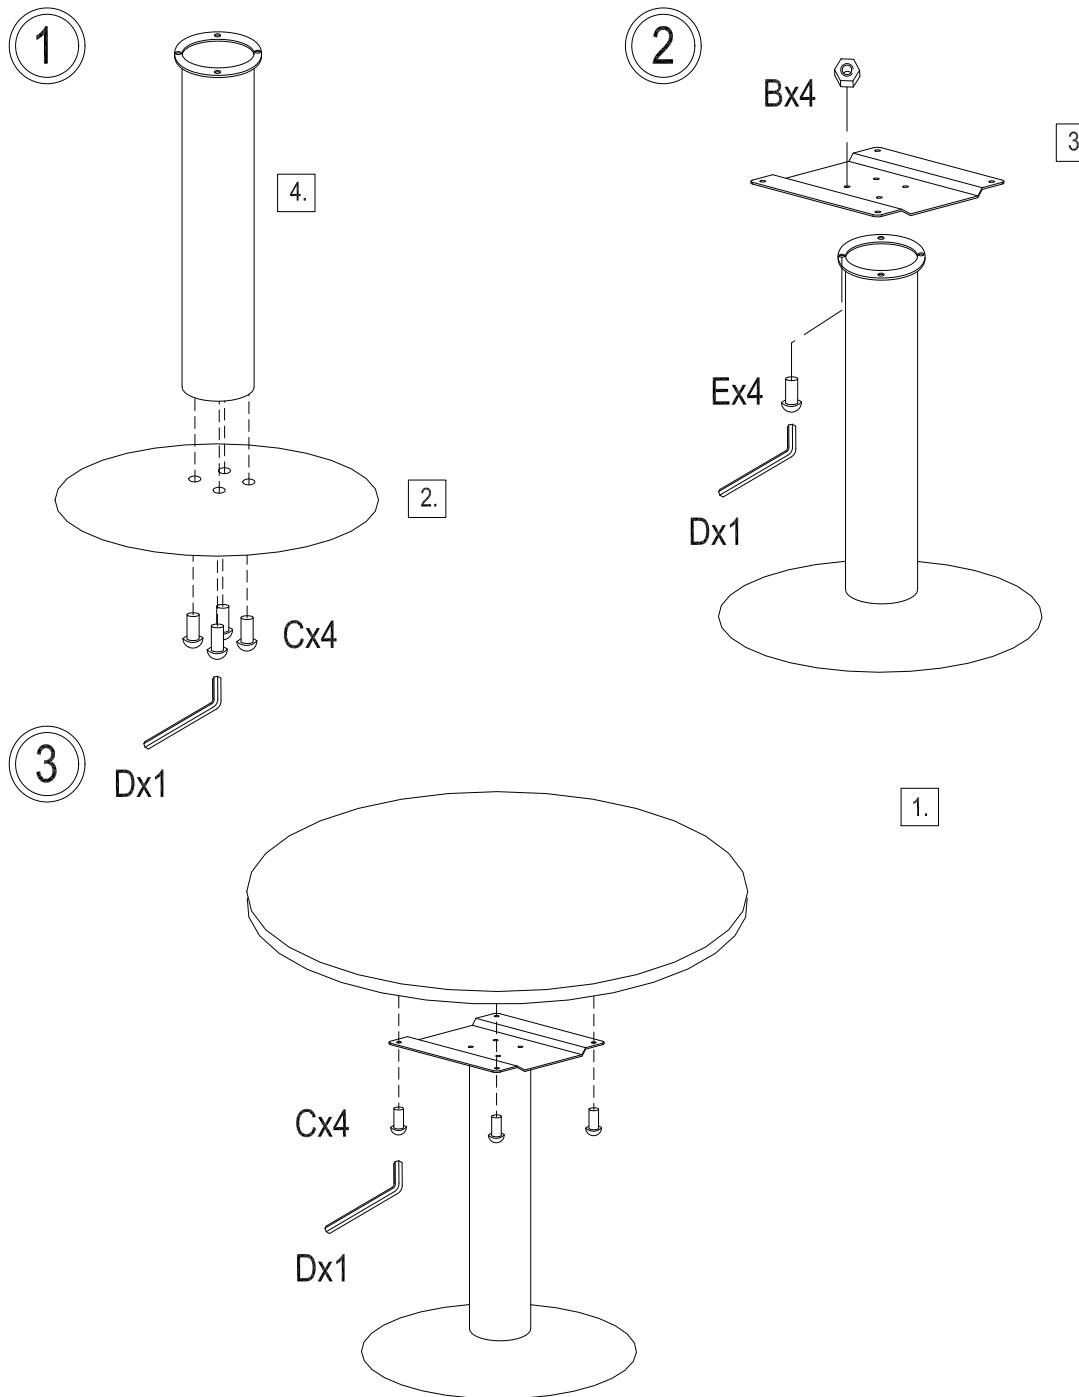 


MEETING

 GLASS

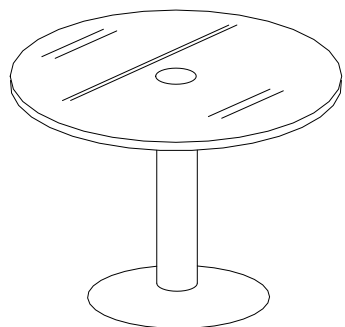


HOJA INSTRUCCIONES SERIE 3005AT05_3006AT05
INSTRUCTIONS LEAFLET SERIAL 3005AT05_3006AT05
BEDIENUNGSANLEITUNG 3005AT05_3006AT05

 
PIEZAS y HERRAMIENTAS
PARTS AND TOOLS
TEILE UND WERKZEUGE

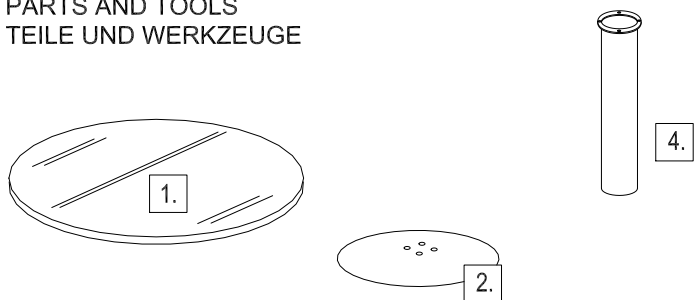

C	D	E
4 M6x16	4 M8x10	1


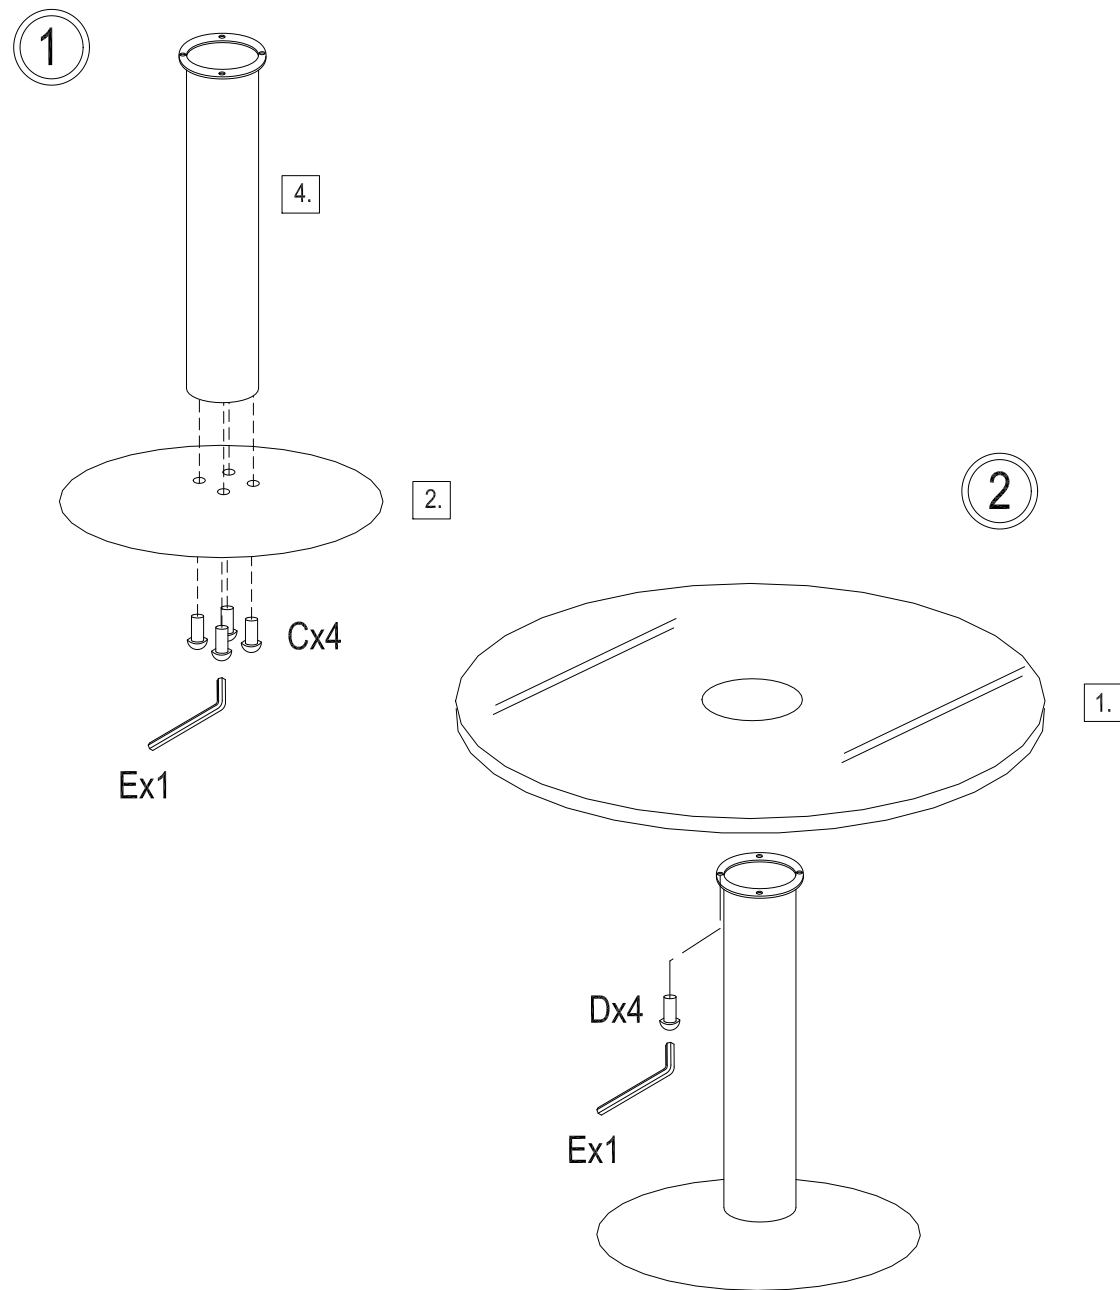 


MEETING




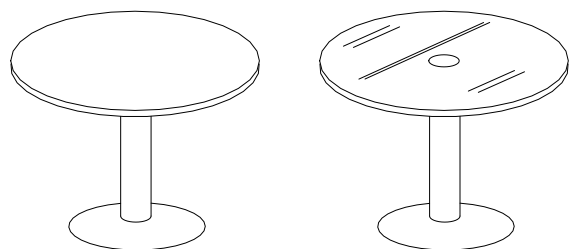 


HOJA INSTRUCCIONES SERIE 3015AP01_3015AP02_3015AP05
INSTRUCTIONS LEAFLET SERIAL 3015AP01_3015AP02_3015AP05
BEDIENUNGSANLEITUNG 3015AP01_3015AP02_3015AP05

  PIEZAS y HERRAMIENTAS
PARTS AND TOOLS
TEILE UND WERKZEUGE

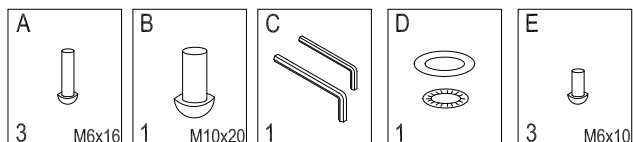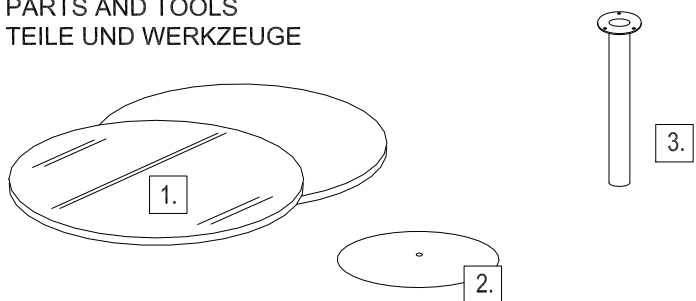




MADERA / WOOD / HOLZ / BOIS

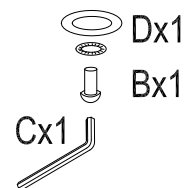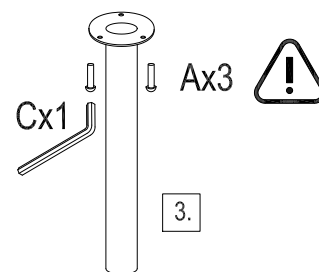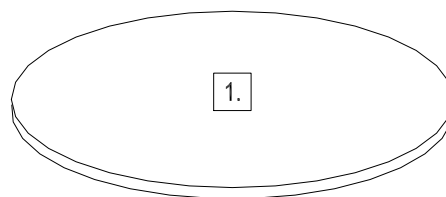    

3015AP01
3015AP02



   CRISTAL / GLASS / GLAS / VERRE

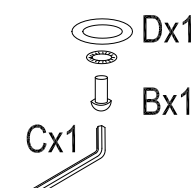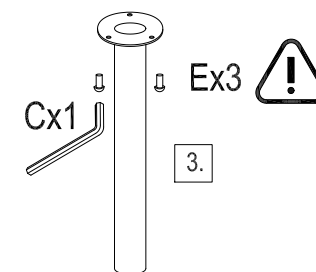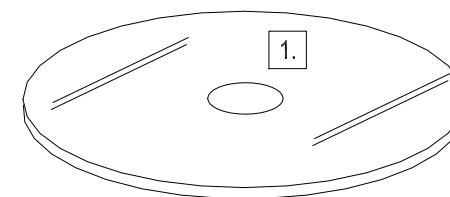

3015AP05

